

GOLD CUP® P11-14 Options Spare Parts Manual

High Pressure Closed and Open Circuit Piston Pumps

HY28-2677-03/GC/US Effective: March 15, 2013



Hydraulic Pump and Power Systems Division and Denison Hydraulics

The Hydraulic Pump and Power Systems Division of Parker Hannifin was formed in 2004 when our significant piston pump business was expanded through the acquisition of **Denison Hydraulics**. The addition of **Denison** allowed us to marry the wealth of knowledge that both companies have in the design, manufacture, and application of piston products in both open circuit and closed circuit system applications. Since before WWII, **Denison** products have been chosen for Military test stand applications and for shipboard hydraulic applications being recognized as technology leaders.

The heavy duty GOLD CUP® series of pumps in this catalog represent a broadening of our product offering with hydrostatic transmission applications in marine, drilling, and shredding applications, among others. The tried and true design of the GOLD CUP® product line incorporates features such as integral servo and replenishing pump, hot oil shuttle, and a unique servo control system; all of which combine to provide a rugged self contained package which can withstand the harshest of conditions and continue to perform with trouble free long life.

The division is a leading worldwide manufacturer of hydraulic components and systems for earthmoving and construction vehicles; for mining equipment; for pulp and paper, chemical and other processing equipment; for ships and ordnance equipment; and for such in-plant machines as machine tools, plastic molding, die casters, and stamping presses.



DENISON Hydraulics

The product information, specifications, and descriptions contained in this publication have been compiled for the use and convenience of our customers from information furnished by the manufacturer; and we can not, and do not, accept any responsibility for the accuracy or correctness of any description, calculation, specification, or information contained herein. No such description, calculation, specification, or information regarding the products being sold has been made part of the basis of the bargain, nor has same created or amounted to an express warranty that the products would conform thereto. We are selling the goods and merchandise illustrated and described on this publication on an "as is" basis, and disclaim any implied warranty, including any warranty of merchantability or warranty of fitness for any particular purpose whatsoever, with respect to the goods and merchandise sold. All manufacturer warranties shall be passed on to our customers, but we shall not be responsible for special, indirect, incidental, or consequential damages resulting from the use of any of the products or information contained or described on this publication. Further, we reserve the right to revise or otherwise make product improvements at any time without notification.

A

WARNING - USER RESPONSIBILITY

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker-Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.

The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors.

To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.

OFFER OF SALE

The items described in this document are hereby offered for sale by Parker-Hannifin Corporation, its subsidiaries or its authorized distributor. This offer and its acceptance are governed by the provisions stated in the detailed "Offer of Sale" elsewhere in this document.

Contents

Design Series – C

Pump Ordering Code	2
P11/14 Sectional Views	
Section View - A - Input Shaft & Retainer Assembly	6
Section View - A - Kits	
P11/14 Shaft Sleeve Installation Tool Details	
Section View - B - Housing, mtg Flange, & Stem Assembly	10
Section View - C - Cam & Cradle Assembly	12
Section View - D - Rotating Group Assembly	14
Section View - E - Pump Type - P - Port Block Assembly	16
Section View - E - Pump Type - V - Port Block Assembly	
Section View - E - Pump Type - S & X - Port Block Assembly	
Section View - E - Pump Type - R & L - Port Block Assembly	
Section View - F - Valve Block Assembly	
Offer of Sale	29


Notes:

- Parts list and associated drawings shown in this bulletin are for standard model pumps only. All documentation for special "M2" modification pump model numbers must be verified with an HPS Factory Representative prior to ordering parts for such products.
- 2. * Indicates Special Instructions or Considerations.
- 3. ** Indicates Common Parts.
- 4. N/A Indicates Not Available or Not Applicable.
- All documentation shown in this bulletin is intended for P11/P14 design level "C" model pumps only. Refer to pump model number/ ordering code to determine design level.
- 6. See ordering code for all configuration options.

- 7. All orientation references are described when viewing pump from main drive shaft with valve block up.
- Assembly part numbers with 0 suffixes, indicate Buna N (Nitrile) seal compound. For Ethylene Propylene, (EPR), compound, use - 4 suffix.
 For Fluorocarbon compound use - 5 suffixes.
- Detail part numbers for O-rings with 671 / 691 prefix, indicate Buna N (Nitrile) seal compound. For Ethylene Propylene, (EPR), compound, use 674 / 694 prefix. For Fluorocarbon compound use 675 / 695 prefix.
- 10. Drawings with items marked with double balloons "O", indicate assemblies.



Pump Ordering Code

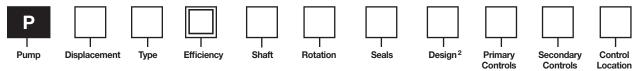

Code	Displacement
6	6.00 in ³ /rev (98 cc/rev)
7	7.25 in ³ /rev (119 cc/rev)
8	8.00 in ³ /rev (131 cc/rev)
11	11.0 in ³ /rev (180 cc/rev)
14	14.0 in ³ /rev (229 cc/rev)
24	24.6 in ³ /rev (403 cc/rev)
30	30.6 in ³ /rev (501 cc/rev)

Code	Туре
F	Fixed Displacement, Open/Closed Circuit
М	Fixed Displacement with High Torque Thru-Drive, Open/Closed Circuit
Р	Variable Displacement, Closed Circuit
Х	Variable Displacement with Medium Torque Thru-Drive, Closed Circuit
s	Variable Displacement with Medium Torque Thru-Drive & Shuttle Package, Closed Circuit
R	Variable Displacement with High Torque Thru-Drive, Closed Circuit
L	Variable Displacement with High Torque Thru-Drive & Shuttle Package, Closed Circuit
٧	Variable Displacement, Open Circuit (P6, 7, 8, 11 & 14 only)
D	Variable Displacement, Open & Closed Circuit (P6, 7 & 8 only)

Code	Efficiency
Н	High Efficiency (P24 only)
Omit	Standard Efficiency

Code	Shaft
2	Keyed SAE – Mechanical Shaft Seal (Single Lip Seal on P6, 7, 8F/M)
3	Splined SAE - Mechanical Shaft Seal(Single Lip Seal on P6, 7, 8F/M)
4	Keyed SAE-D (Mounting & Shaft) – Mechanical Shaft Seal (P6, 7 & 8 only, Single Lip Seal on Fixed Dis- placement Pumps)
-5	Splined SAE-D (Mounting & Shaft) – Mechanical Shaft Seal (P6, 7 & 8 only, Single Lip Seal on Fixed Dis- placement Pumps)
7	Keyed SAE - Double Lip Shaft Seal
8	Splined SAE - Double Lip Shaft Seal
9	Keyed (long) SAE – Double Lip Shaft Seal
10	Keyed (long) SAE - Mechanical Shaft Seal

Code	Rotation
R	Clockwise
L	Counterclockwise


Code	Seals
1	Nitrile (Buna-N)
4	EPR 1, 3
5	Fluorocarbon

Code	Primary Controls
Omit	None (Fixed Displacement only)
10	Screw Adjustment (Spring Offset to Maximum Displacement)
2A	Cylinder Control w/Adjustable Maximum Volume Stops
2H	Cylinder Control – 3-Position (Spring Control with Zero Adjustment)
2M	Cylinder Control – 2-Position Electro- hydraulic w/Adjustable Maximum Vol- ume Stop (Spring Offset to Maximum Displacement) ¹
2N	Cylinder Control – 3-Position (Spring Centered) Electrohydraulic ¹
40	Rotary Servo - Spring Centered
4A	Rotary Servo – Spring Centered w/ Adjustable Maximum Volume Stops
4B	Rotary Servo – Spring Centered w/ Automatic Brake Control
4C	Rotary Servo – Spring centered w/ Adjustable Maximum Volume Stops & Automatic Brake Control
5A	Electrohydraulic Stroker w/Adjustable Maximum Volume Stops ¹
5C	Electrhydraulic Stroker w/Adjustable Maximum Volume Stops & Automatic Brake Control ¹
7D	High IQ with 10 GPM Servo Valve & Volume Indicator 1
7F	High IQ with 10 GPM Servovalve & 4A (Rotary Servo) Control ¹
7J	High IQ with DF+ Valve & Volume Indicator ¹
7K	High IQ with DF+ Valve & 4A (Rotary Servo) Control 1
8A	Hydraulic Stroker w/Adjustable Maxi- mum Volume Stops
8C	Hydraulic Stroker w/Adjustable Maximum Volume Stops & Automatic Brake Control
9A	Electrohydraulic Stroker w/Adjustable Maximum Volume Stops ¹
9C	Electrohydraulic Stroker w/Adjustable Maximum Volume Stops & Automatic Brake Control ¹
9D	Electro-hydraulic stroker w/ adjustable maximum volume stops

Code	Secondary Controls
Omit	None (Fixed Displacement only)
2	Volume Indicator
4	Torque Limiter & Volume Indicator
6	Cam Position Feedback Potentiometer ¹
7	Cam Position Feedback RVDT (AC) ¹
8	Cam Position Feedback R VDT (DC) ¹

Code	Control Location
Omit	None (Fixed Displacement only)
Α	Primary Control on Port A Side
В	Primary Control on Port B Side

- Not ATEX approved.
 Assigned by manufacturer
 Not available when using "5A" or "5C" primary controls. Pump will be unpainted unless otherwise specified.

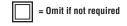



Pump Ordering Code



Control	Code	Control & Displacement Features
	00	CETOP3, NG6 Valve, 110AC/60Hz with Hirschmann Connector 1
	01	CETOP3, NG6 Valve, 12VDC with Hirschmann Connector ¹
	02	CETOP3, NG6 Valve, 240VAC/50Hz with Hirschmann Connector 1
2M* &	03	CETOP3, NG6 Valve, 110VAC/60Hz, Wiring Box ¹
2N*	04	CETOP3, NG6 Valve, 12VDC, Wiring Box ¹
	05	CETOP3 (D03, NG6) Interface, No Valve ¹
	06	CETOP3, NG6 Valve, 24VDC with Hirschmann Connector ¹
	07	CETOP3, NG6 Valve, 110VAC/50Hz with Hirschmann Connector ¹
5**	00	With Deadband 1
3	01	Without Deadband ¹
	00	Without Manual Override Shutoff ¹
7**	01	With Manual Override Shutoff ¹ (required for F & K primary options)
	00	75-350 PSI (5-24 Bar)
	01	75-435 PSI (5-30 Bar)
8**	02	100-375 PSI (7-26 Bar)
	03	150-400 PSI (10-28 Bar)
	04	75-250 PSI (5-17 Bar)
9**	00	24VDC
3	01	12VDC
All Other	00	None ¹
Pump	Code	Reduced Displacement
	00	Standard Cam (19°)
P**F & P**M	10	P6 with 17° Cam – 5.3 in³/rev (87cc/rev) P7 with 17° Cam – 6.4 in³/rec (105 cc/rev) P8 with 17° Cam – 7.1 in³/rev (116 cc/rev) P11 with 17° Cam – 9.7 in³/rev (160 cc/rev) P14 with 17° Cam – 12.5 in³/rev (205 cc/rev) P24 with 17° Cam – 22.0 in³/rev (360 cc/rev) P30 with 17° Cam – 27.2 in³/rev (446 cc/rev)
	20	P6 with 15° Cam – 4.6 in³/rev (76 cc/rev) P7 with 15° Cam – 5.6 in³/rev (92 cc/rev) P8 with 15° Cam – 6.2 in³/rev (102 cc/rev) P11 with 15° Cam – 8.5 in³/rev (140 cc/rev) P14 with 15° Cam – 10.9 in³/rev (179 cc/rev)
	30	P6 with 13° Cam – 4.0 in³/rev (66 cc/rev) P7 with 13° Cam – 4.8 in³/rev (79 cc/rev) P8 with 13° Cam – 5.3 in³/rev (88 cc/rev)


Code	Internal Pump
0	1.07 in ³ /rev (17.5 cc/rev) – P6, 7, 8P/S/X/V/D & P11, 14V only** 2.14 in ³ /rev (35 cc/rev) – P11, 14P/S/X only** 2.81 in ³ /rev (46 cc.rev) – P24, 30P/S/X only (standard)**
1	1.61 in ³ /rev (26.4 cc/rev) – P24, 30P/S/X only (auxiliary external replenishing flow required)
2	1.05 in³/rev (17.2 cc/rev) – P24, 30P/S/X only (auxiliary external replenishing flow required)
3	3.56 in³/rev (58.3 cc/rev) – P24, 30P/S/X only
4	4.84 in³/rev (79.3 cc/rev) – P24, 30P/S/X only
5	5.42 in³/rev (88.8 cc/rev) – P24, 30P/S/X only
6	6.10 in ³ /rev (100.0 cc/rev) – P24, 30P/S/X only
Х	No Internal Pump (standard on P*R/L/F/M)

^{**} Omit code if no external drive is required.


Code	External Drive
Omit	None ¹
М	Blanking plate - for P6, 7, 8, 11, 14S/X only
Α	SAE-A (SAE 82-2) – P6, 7, 8, 11, 14S/X/R/L/M only
В	SAE-B (SAE 101-2) – P6, 7, 8, 11, 14, 24, 30/S/X/R/L/M SAE-B (SAE 101-4) – P11, 14, 24, 30R/L/M
С	SAE-C (SAE 127-2) – P6, 7, 8, 11, 14, 24, 30R/L/M & P24, 30S/X SAE-C (SAE 127-4) – P11, 14, 24, 30R/L/M
D	SAE-D (SAE 152-4) - P11, 14, 24, 30R/L/M only
E	SAE-E (SAE 165-4) - P11, 14, 24, 30R/L/M only
F	SAE-F (SAE 177-4) – P24, 30R/L/M only


Code	External Mounting
Omit	No External Drive Required
0	No External Pump Mounted
1	External Pump Mounted (must be separately specified) – Requires Special Modification "-M2" 1
2	ATEX Externally Mounted Pump

Code	Special Modifications
Omit	None
NP	No Paint ¹
EX	ATEX APPROVED PUMP (May contain additional modifications. Contact tech support.)
M2	Other Special Modification (example: bronze caged barrel bearing for low viscosity fluids, tandem pumps, etc.) 1

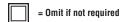





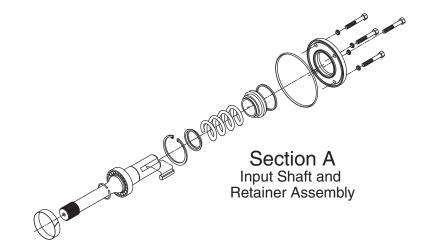

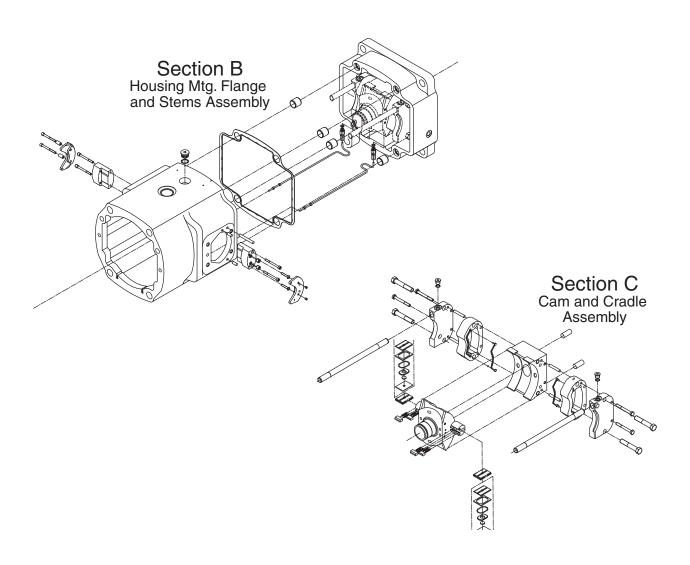




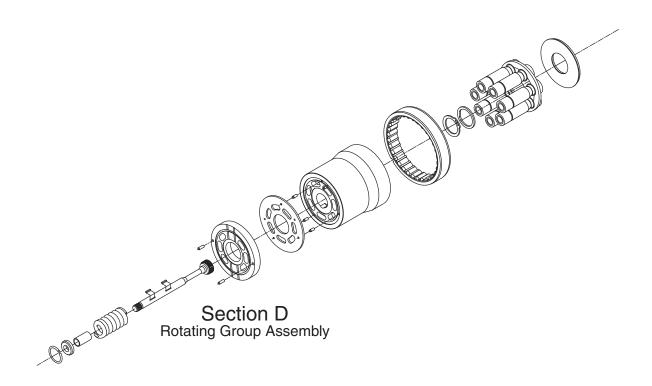

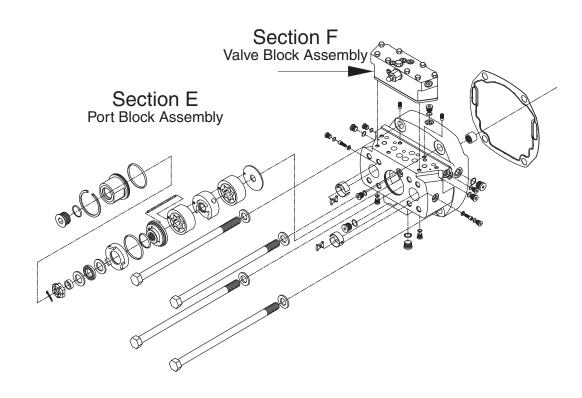



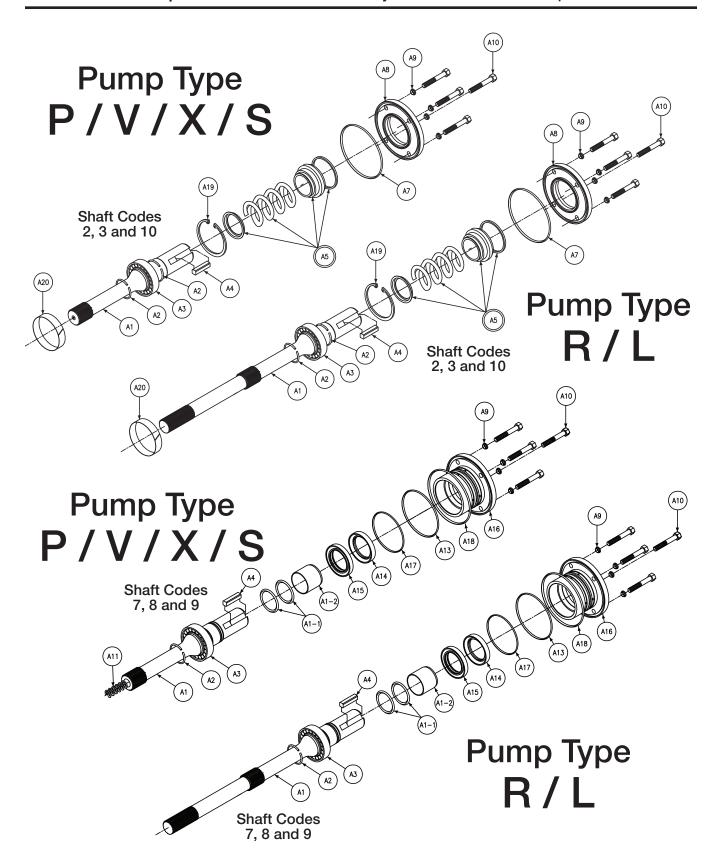



			P11/1		ction A shaft and retainer		
Balloon #	Pump Type	Shaft Code	Rotation	Seal Code	Item #	Description	Qty
	P/V/X/S	2	**	**	033-71601-0	Shaft, Keyed	
	P/V/X/S	3	**	**	033-71604-0	Shaft, Splined	
	P/V/X/S	7	**	**	* 033-94180-0	Shaft, Keyed]
	P/V/X/S	8	**	**	* 033-94181-0	Shaft, Splined	
	P/V/X/S	9	**	**	* 033-94220-0	Shaft, Keyed]
A1	P/V/X/S	10	**	**	033-93608-0	Shaft, Keyed	1
AI	R/L	2	**	**	033-92617-0	Shaft, Keyed] '
	R/L	3	**	**	033-92619-0	Shaft, Splined	
	R/L	7	**	**	* 033-94182-0	Shaft, Keyed]
	R/L	8	**	**	* 033-94183-0	Shaft, Splined]
	R/L	9	**	**	* 033-94221-0	Shaft, Keyed	
	R/L	10	**	**	033-93614-0	Shaft, Keyed	
	P/V/X/S/R/L	7/8/9	**	1	671-00131-0		
A1-1	P/V/X/S/R/L	7/8/9	**	4	674-00131-0	Gasket O-ring	2
	P/V/X/S/R/L	7/8/9	**	5	675-00131-0		
A1-2	P/V/X/S/R/L	7/8/9	**	**	033-94184-0	Sleeve, Shaft	1
A2	**	2/3/10	**	**	033-71641-0	Retaining ring	2
AZ	**	7/8/9	**	**	033-59504-0	Hetalilling filing	1
A3	**	2/3/10	**	**	230-82148-0	Shaft Bearing	1
AS	**	7/8/9	**	**	230-82214-0	Shart Bearing	'
A4	**	2/7	**	**	033-71514-0	Key	1
A4	**	9/10	**	**	033-93618-0	Rey	'
	**	2/3/10	**	1	623-00016-0		
A5	**	2/3/10	**	4	623-00016-4	Shaft seal	1
	**	2/3/10	**	5	623-00016-5		
	**	2/3/10	**	1	671-00249-0		
A7	**	2/3/10	**	4	674-00249-0	Gasket O-ring	1
	**	2/3/10	**	5	675-00249-0		
A8	**	2/3/10	**	**	033-57872-0	Seal retainer	1
A9	**	**	**	**	631-45007-0	Nyltite Gasket	4
A10	**	**	**	**	306-40021-0	Hex Hd cap screw	4
A11	P/V/X/S	7/8/9	**	**	033-91713-0	Pre load spring	1
	P/V/X/S/R/L	7/8/9	**	1	671-00044-0		
A13	P/V/X/S/R/L	7/8/9	**	4	674-00044-0	Gasket O-ring	1
	P/V/X/S/R/L	7/8/9	**	5	675-00044-0		
A14	P/V/X/S/R/L	7/8/9	CW	1	620-82104-0	Inner seal	1
717	P/V/X/S/R/L	7/8/9	CCW	1	620-82105-0	illier sear	
	P/V/X/S/R/L	7/8/9	**	1	620-82101-0		
A15	P/V/X/S/R/L	7/8/9	**	4	N/A	_ Outer Seal	1
	P/V/X/S/R/L	7/8/9	**	5	N/A		
A16	**	7/8/9	**	**	033-91709-0	Seal retainer	1
	**	7/8/9	**	1	671-00237-0		
A17	**	7/8/9	**	4	674-00237-0	Gasket O-ring	1
	**	7/8/9	**	5	675-00237-0		
	**	7/8/9	**	1	671-00251-0		
A18	**	7/8/9	**	4	674-00251-0	Gasket O-ring	1
	**	7/8/9	**	5	675-00251-0		
A19	**	2/3/10	**	**	356-65013-0	Retaining ring	1
A20	**	2/3/10	**	**	033-53984-0	Brg. shim, .007"	select fit 1 only
	**	2/3/10	**	**	033-53983-0	Brg. shim, .008"	
Note: Shat	ft part numbe	ers marke	ed with * are	e not usa	able without items A1-	1 & A1-2, (o'rings and s	sleeve).

Section A Kits Listed on Next Page.



P11/14 S	eal Kits
----------	----------

Note: Seal kits for "M" mod pumps and for aux pumps require part number verification with HPD factory representatives. Seal Kit part numbers below contain all seals for the following items.

- 1. Main pump
- 2. Valve block
- 3. Input/output controls

4. shaft seal

II onait ooai			
Shaft Code	Rotation	Seal code	Part number
2/3	**	1	S23-17032-0
2/3	**	4	S23-17032-4
2/3	**	5	S23-17032-5
7/8/9	CW	1	S23-17033-0
7/8/9	CW	4	S23-17033-4
7/8/9	CW	5	S23-17033-5
7/8/9	CCW	1	S23-17034-0
7/8/9	CCW	4	S23-17034-4
7/8/9	CCW	5	S23-17034-5

P11/14 Shaft and Bearing Assembly Kits

Composed of Items: A1, A2, A3, A4, and A1-1, A1-2 for 7 / 8 / 9 shafts as applicable.

101 1 1 0 1 3 3	nans as applica	abic.
Shaft Code	Pump Type	Part Number
2	P/V/X/S	S13-43969-0
3	P/V/X/S	S13-43968-0
7	P/V/X/S	S23-18182-0
8	P/V/X/S	S23-18183-0
9	P/V/X/S	S23-18268-0
10	P/V/X/S	S23-17489-0
2	R/L	S23-16255-0
3	R/L	S23-16257-0
7	R/L	S23-18184-0
8	R/L	S23-18185-0
9	R/L	S23-18269-0
10	R/L	S23-17495-0

P11/14 Shaft Sleeve and O'rings

Replacement shaft sleeve & o'rings are available for P/V/X/S/R/L units with 7/8/9 shafts only. However, special tools are required to press old sleeve off and new sleeve on shaft. Reference tool drawing, 213-0-004203, see page 9 for drawing details.


210-0-0	07200,	300	page c	rior drawing c	icians.
Pump	Shaft		Seal	Part Num-	
Type	Code	Qty	Code	ber	Description
P/V/X/S			1	671-00131-0	
P/V/X/S	7/8/9	2	4	674-00131-0	gasket o'ring
P/V/X/S			5	675-00131-0	
P/V/X/S	7	1	**	* 033-94180-0	
P/V/X/S	8	1	**	* 033-94181-0	* shaft
P/V/X/S	9	1	**	* 033-94220-0	
R/L	7	1	**	* 033-94182-0	
R/L	8	1	**	* 033-94183-0	* shaft
R/L	9	1	**	* 033-94221-0	
P/V/X/S	7	1	**		
P/V/X/S	8	1	**	033-94184-0	shaft sleeve
P/V/X/S	9	1	**		


Note: Shaft P/N's marked with * are not usable without items A1-1 & A1-2, (o'rings and sleeve).

P11/14	Shaft an	d Seal Re	tainer Asse	mbly Kits
Compos	sed of Ite	ms: A1, A1	-1, A1-2, A2	, A3, A4, A9,
A10, A1	3, A14, A	15, A16, A	17, & A18	
Shaft	Pump			
Code	Type		Seal Code	
7	P/V/X/S	CW	1	S23 -15219-0
8	P/V/X/S	CW	1	S23 -15923-0
9	P/V/X/S	CW	1	S23 -19502-0
7	P/V/X/S	CW	5	S23 -15219-5
8	P/V/X/S	CW	5	S23 -15923-5
9	P/V/X/S	CW	5	S23 -19502-5
7	P/V/X/S	CCW	1	S23 -15350-0
8	P/V/X/S	CCW	1	S23 -15891-0
9	P/V/X/S	CCW	1	S23 -19503-0
7	P/V/X/S	CCW	5	S23 -15350-5
8	P/V/X/S	CCW	5	S23 -15891-5
9	P/V/X/S	CCW	5	S23 -19503-5
7	R/L	CW	1	S23 -16807-0
8	R/L	CW	1	S23 -16805-0
9	R/L	CW	1	S23 -19504-0
7	R/L	CW	5	S23 -16807-5
8	R/L	CW	5	S23 -16805-5
9	R/L	CW	5	S23 -19504-5
7	R/L	CCW	1	S23 -16808-0
8	R/L	CCW	1	S23 -16806-0
9	R/L	CCW	1	S23 -19505-0
7	R/L	CCW	5	S23 -16808-5
8	R/L	CCW	5	S23 -16806-5
9	R/L	CCW	5	S23 -19505-5

	P11/14 Seal retainer assembly kits			
Composed of Items: A14, A15 and A16				
Shaft	Pump			
Code	Type	Rotation	Seal Code	Part Number
7/8/9	P/V/X/ S/R/L	CW	1	S23-15215-0
7/8/9	P/V/X/ S/R/L	CCW	1	S23-15217-0



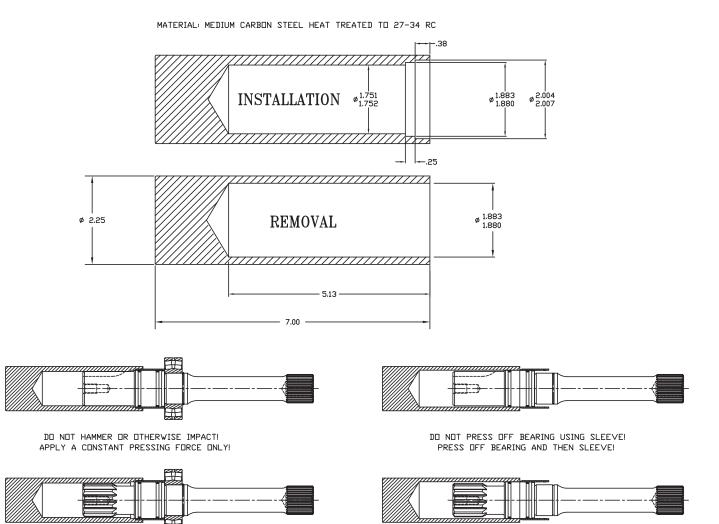

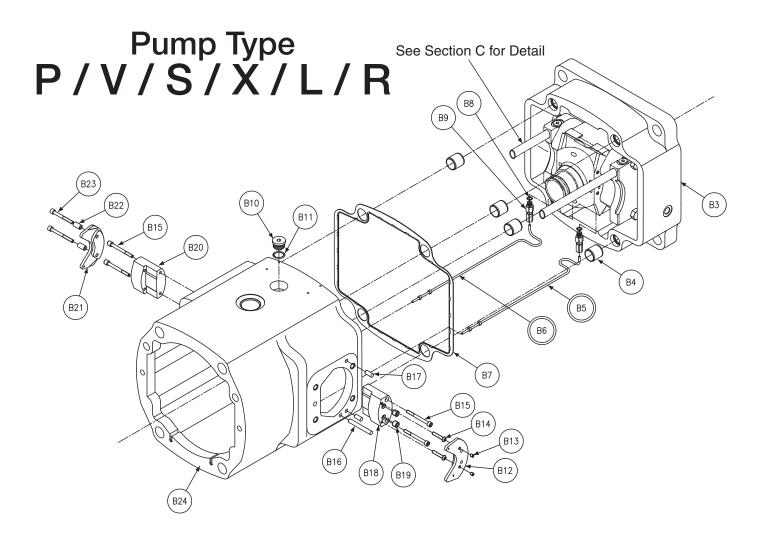

Note: Above view shows input on "A" side of pump.




Section View - B - Housing, Mtg. Flange, & Stem Assembly

			Section			
	P11/14	Housing, Mo	ounting Flar	nge, Input, and C	Output Stems	
Balloon #	Pump Type	Shaft Code	Seal Code	Item #	Description	Qty
B3	P11/14 P/V/S/X/ R/L	2/3/10	**	033-71546-0	Mounting Flange	1
	**	7/8/9	**	033-91711-0		
B4	**	**	**	033-72664-0	Locating Sleeve	4
B5	**	**	**	S13-43966-0	Left Feed Tube	1
B6	**	**	**	S13-43967-0	Right Feed Tube	1
B7	**	**	**	033-91076-0	Housing/Mounting Flange Gasket	1
		**	1	691-00902-0		
B8	**	**	4	694-00902-0	Gasket O-ring	2
		**	5	695-00902-0]	
B9	**	**	**	492-15265-0	Straight thread connector	2
B10	**	**	**	033-91106-0	Barrel bearing retainer	1
		**	1	691-00908-0		
B11	**	**	4	694-00908-0	Gasket O-ring	1
		**	5	695-00908-0]	
B12	**	**	**	033-53874-0	Servo Input Plate	1
B13	**	**	**	312-09032-0	Screw	2
B14	**	**	**	353-25073-0	Button Head Screw	2
B15	**	**	**	359-09240-0	Socket Head Cap Screw	4
B16	**	**	**	325-16320-0	Roll Pin	2
B17	**	**	**	324-21608-0	Dowel Pin	4
B18	**	**	**	033-71596-0	Servo Stem	1
D10	P11/14 P/S/X/R/L	**	**	026 00641 0	Flush, Plug 1/16" NPT	2
B19	P11/14 V	**	**	036-20641-0	with 1/16" Dia. Orifice	1
B20	**	**	**	033-71616-0	Balance Stem	1
B21	**	**	**	033-70546-0	Balance Plate	1
B22	**	**	**	033-71247-0	Spacer	2
B23	**	**	**	359-09180-0	Socket Head Cap Screw	2
B24	P11/14 P/V/S/X/ R/L	**	**	033-91191-0	Housing, Variable Volume	1

Stem Kits	
Input stem kits include the following:	
B12, B13, B14, B15, B18 and B19	
Ouput stem kits include the following:	
B15, B20, B21, B22 and B23	
	Part Number
P11/14 Input Stem Kit	
P11/14 Input Stem Kit P11/14 Output Stem Kit	
	S23-12276-0



Pump Type P / V / X / S / L / R

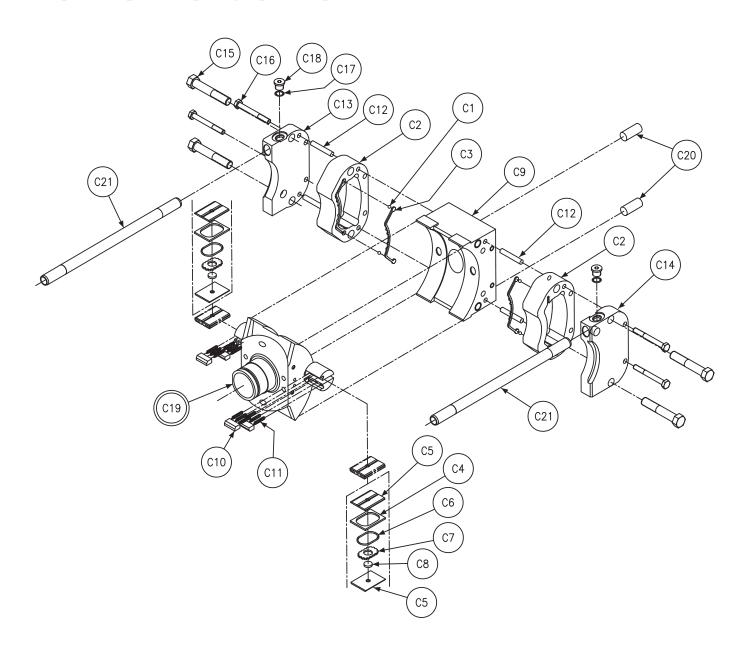




Section View - C - Cam & Cradle Assembly

				ection C		
				Cam and Crad		
Balloon #	Shaft Code	Rotation	Seal Code	Item #	Description	Qty
C1	**	**	**	201-06001-0	Check Ball	2
C2	**	**	**	033-71615-0	Vane Chamber	2
	**	**	1	606-25040-0		
C3	**	**	4	606-25040-4	Molded Seal	2
	**	**	5	606-25040-5		
C4	**	**	**	033-71611-0	Vane Seal	2
C5	**	**	**	033-71608-0	Vane Seal Backup Plate	4
	**	**	1	691-00125-0	-	
C6	**	**	4	694-00125-0	Gasket O-ring	2
	**	**	5	695-00125-0		
C7	**	**	**	033-71607-0	Vane Spacer	2
C8	**	**	**	033-70803-0	Check Valve	2
00	2/3/10	**	**	033-57879-0	Dookey Cyndle	4
C9	7/8/9	**	**	033-91712-0	Rocker Cradle	1
C10	**	**	**	033-72234-0	Vane Holddown	4
C11	**	**	**	033-72233-0	Spring Holddown	12
C12	**	**	**	324-22428-0	Dowel Pins	4
010	**	CCW	**	033-71595-0	Digital Control Cover	1
C13	**	CW	**	033-71598-0	Right Control Cover	'
014	**	CCW	**	033-71593-0	Laft Cantual Carren	-
C14	**	CW	**	033-71597-0	Left Control Cover	1
C15	**	**	**	306-40189-0	Hex Hd Cap Screw	4
C16	**	**	**	306-40140-0	Hex Hd Cap Screw	4
	**	**	1	691-00905-0	·	
C17	**	**	4	694-00905-0	Gasket O-ring	2
	**	**	5	695-00905-0		
C18	**	**	**	488-35020-0	Hex Socket Plug	2
C19	**	**	**	S23-12107-0	Rocker Cam and Plug Assembly	1
C20	**	**	**	324-23216-0	Dowel Pin	2
C21	**	**	**	033-71609-0	Tube	2

Cam and Cradle assembly							
Composed of Items: C1 thru C21							
P11/14 P,V,X,S,R,L							
Part Number Shaft Type Rotation							
S23-17240-0	2/3/10	CW					
S23-17241-0	2/3/10	CCW					
S23-18966-0	7/8/9	CW					
S23-18967-0	7/8/9	CCW					



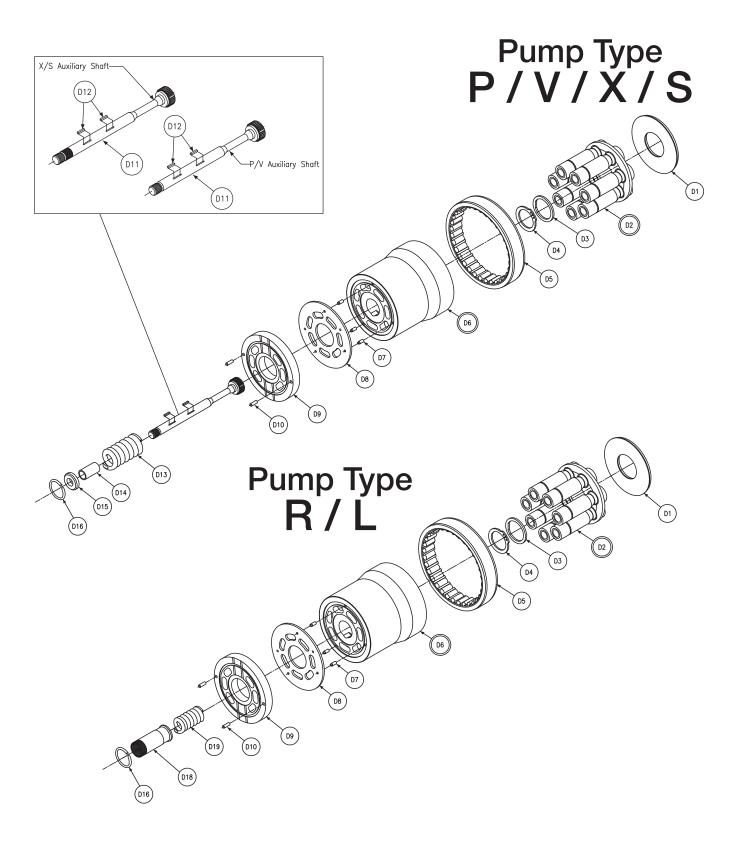




				Section D		
			P11/1	4 Rotating gro	un	
Balloon #	Displacement	Pump Type		Item #	Description	Qty
D1	**	**	**	033-71569-0	Creep plate	1
	P11	**	**	S13-45544-0	Piston and Shoes	_
D2	P14	**	**	S13-43970-0	w/Retainer Assembly	1
D3	**	**	**	033-91706-0	Bearing, thrust	1
	**	**	**	033-71556-0	Retaining Ring, Yellow, .109/.107 thk	
	**	**	**	035-71557-0	Retaining Ring, Green, .107/.105 thk	
D4	**	**	**	035-71558-0	Retaining Ring, Red, .105/.103 thk	1
	**	**	**	035-71559-0	Retaining Ring, Blue, .103/.101 thk	
	**	**	**	033-91231-0	Retaining Ring, White, .100/.098 thk	
D5	**	**	**	033-91190-0	Barrel Bearing	1
D6	P11	**	**	S13-45381-0	Barrel Assembly	1
D6	P14	**	**	S13-43965-0	Barrel Assembly	
D7	**	**	**	033-49825-0	Pin, Face & Port Plate	3
D8	P11	**	**	033-71921-0	Face plate	1
D0	P14	**	**	033-71575-0	Face plate	
	P11	P/S/X/R/L	CW	033-71915-0		
	P11	P/S/X/R/L	CCW	033-71914-0		
	P14	P/S/X/R/L	CW	033-71617-0		
D9	P14	P/S/X/R/L	CCW	033-71600-0	Port Plate	1
l Da	P11	V	CW	033-91195-0	Port Plate	' '
	P11	V	CCW	033-91224-0		
	P14	V	CW	033-91241-0		
	P14	V	CCW	033-91242-0		
D10	**	**	**	324-21610-0	Dowel Pin	2
D11	**	P/V	**	033-71603-0	Shaft, Auxiliary Drive	1
ווט	**	S/X	**	033-91053-0	Shart, Auxiliary Drive	'
D12	**	V	**	211-22034-0	Square Key	1
DIZ	**	P/S/V/X	**	211-22034-0	Square Key	2
D13	**	P/S/V/X	**	033-71562-0	Holddown Spring	1
D14	**	P/S/V/X	**	033-71561-0	Barrel Stop	1
D15	**	P/S/V/X	**	033-71560-0	Spring Retainer	1
D16	**	**	**	033-71564-0	Retaining Ring	1
D18	**	R/L	**	033-92687-0	Holddown Sleeve	1
D19	**	R/L	**	033-92686-0	Holddown Spring	1

Major Rotating Group									
Composed of Items:									
	D1,D2,D5,D6,D7, D8, D9,and D10								
Displacement Model Type Rotation Part Number									
P11	P/X/S/R/L	CW	S23-17101-0						
P11	P/X/S/R/L	CCW	S23-17102-0						
P11	V	CW	S23-17105-0						
P11	V	CCW	S23-17106-0						
P14	P/X/S/R/L	CW	S23-17103-0						
P14	P/X/S/R/L	CCW	S23-17104-0						
P14	V	CW	S23-17107-0						
P14	V	CCW	S23-17108-0						

Barrel Hold Down								
Composed of Items:								
D11,D13,D14,D15 and D16 For P/V/X/S								
No Kit available for R/L versions								
	Model							
Displacement	Type	Rotation	Part Number					
P11/14	P/V	**	S23-17250-0					
P11/14	X/S	**	S23-17251-0					



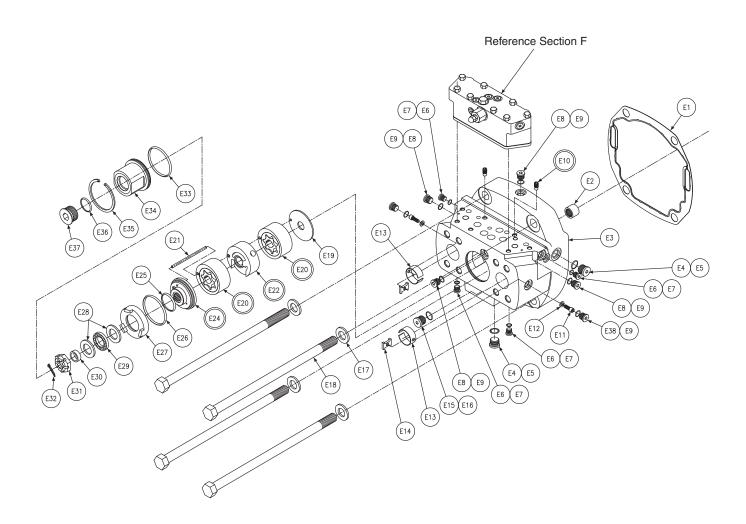


Gerotor Assembly							
Composed of Items:							
E2, E19, E20, E		l, E25, E20	6, E27, E28,				
E29, E30, E32,							
No Kit available for R/L versions							
Displacement	Pump Type	Rotation	Part Number				
P11/14	Р	CW	S23-17043-0				
P11/14	Р	CCW	S23-17044-0				



Balloon # Rotation Seal Code Item # Description Oty				Section E		
E1 ** ** 230-82146-0 Port Block Gasket Housing 1 E2 ** ** 230-82146-0 Needle Bearing 1 E3 ** ** 033-57912-0 Port Block 1 E4 ** ** 033-57912-0 Port Block 1 E4 ** ** 048-35018-0 Hex Socket Plug 2 E5 ** 4 694-00908-0 Gasket O-ring 2 E6 ** 1 691-00908-0 Gasket O-ring 2 E6 ** 1 691-00908-0 Gasket O-ring 4 E7 ** 4 88-3501-0 Plug 4 E7 ** 4 694-00908-0 Gasket O-ring 4 E8 ** 4 88-3501-0 Plug 4 E8 ** 1 691-00908-0 Gasket O-ring 4 E8 ** 1 691-00908-0 Gasket O-ring 4 E9 ** 4 674-00908-0 Gasket O-ring 6 E10 ** 5 695-00908-0 Gasket O-ring 6 E10 ** 5 695-00908-0 Gasket O-ring 6 E11 ** 033-70908-0 Screw 2 E12 ** 348-10016-0 Washer, Lock 2 E13 ** 033-70502-0 Fing Check, P11/14P 2 E14 ** 033-70489-0 Clamp 2 E15 ** 1 691-00910-0 Gasket O-ring 1 E16 ** 4 674-00910-0 Gasket O-ring 1 E16 ** 4 683-0050-0 Hex Socket Plug 1 E17 ** 350-10109-0 Hex Socket Plug 1 E18 ** 306-40172-0 Hex Hd Cap Screw 4 E19 ** 330-40172-0 Hex Hd Cap Screw 4 E19 ** 103-7169-0 Side Plate and Bearing Assembly 1 E20 ** 11 671-00129-0 Gasket O-ring 1 E22 ** 11 671-00129-0 Gasket O-ring 1 E24 CW ** 513-46763-0 Side Plate and Bearing Assembly 1 E25 ** 4 674-00129-0 Gasket O-ring 1 E26 ** 4 674-00129-0 Gasket O-ring 1 E27 ** 033-71620-0 Dowel Pin 1 E28 ** 1 671-00129-0 Gasket O-ring 1 E29 ** 1 671-00129-0 Gasket O-ring 1 E29 ** 1 671-00129-0 Gasket O-ring 1 E26 ** 4 674-00140-0 Gasket O-ring 1 E27 ** 033-71620-0 Dowel Pin 1 E28 ** 033-71619-0 Finus Hearing Assembly 1 E29 ** 1 671-00129-0 Gasket O-ring 1 E20 ** 1 671-00129-0 Gasket O-ring 1 E21 ** 1 671-00129-0 Gasket O-ring 1 E22 ** 1 671-00129-0 Gasket O-ring 1 E23 ** 1 671-00129-0 Gasket O-ring 1 E26 ** 1 674-00144-0 Gasket O-ring 1 E27 ** 1 671-00129-0 Gasket O-ring 1 E28 ** 1 674-0014-0 Gasket O-ring 1 E30 ** 1 674-0014-0 Gasket O-ring 1 E31 ** 1 671-0014-0 Gasket O-ring 1 E31 ** 1 671-0014-0 Gasket O-ring 1 E32 ** 1 674-0014-0 Ga	Dalla an #	Datation	0101-			04-
E2 ** ** 230-82146-0 Needle Bearing 1 E3 ** ** 033-57912-0 Port Block 1 E4 ** ** 488-35018-0 Hex Socket Plug 2 ** 1 691-0908-0 Gasket O-ring 2 E5 ** 4 694-0908-0 Gasket O-ring 2 ** 1 691-0904-0 Flug 4 ** 1 691-0904-0 Gasket O-ring 4 E7 ** 4 694-09094-0 Gasket O-ring 4 E7 ** 4 694-09094-0 Gasket O-ring 4 E8 ** ** 488-35011-0 Plug 4 ** 1 691-09094-0 Gasket O-ring 6 E8 ** ** 488-35041-0 Plug 4 ** 1 691-09096-0 Gasket O-ring 6 E9 ** 4 674-0906-0 Gasket O-ring 6 E10 ** ** 513-40266-0 Check Valve Assembly 2 E11 ** ** 033-7098-0 Screw 2 E12 ** 348-10016-0 Washer Lock 2 E13 ** ** 348-10016-0 Washer Lock 2 E14 ** ** 033-70489-0 Clamp 2 E15 ** 4 88-3505-0 Hex Socket Plug 1 E16 ** 4 674-09010-0 Gasket O-ring 1 E16 ** 4 674-09010-0 Gasket O-ring 1 E16 ** 4 674-09010-0 Gasket O-ring 1 E17 ** ** 350-10109-0 Washer Lock 2 E18 ** ** 350-10109-0 Gasket O-ring 1 E19 ** 350-10109-0 Gasket O-ring 1 E20 ** 333-71619-0 Gasket O-ring 1 E21 ** ** 350-10109-0 Gasket O-ring 1 E22 ** ** 350-10109-0 Gasket O-ring 1 E24 ** ** 350-10109-0 Gasket O-ring 1 E25 ** 4 674-00129-0 Gasket O-ring 1 E26 ** 4 674-00129-0 Gasket O-ring 1 E27 ** 350-10109-0 Hex Hd Cap Screw 4 E29 ** 313-449762-0 Side Plate and Bearing Assembly 1 E26 ** 4 674-00129-0 Gasket O-ring 1 E27 ** 5 675-0014-0 Gasket O-ring 1 E28 ** 1 671-0014-0 Gasket O-ring 1 E29 ** 333-71620-0 Gasket O-ring 1 E20 ** 313-449762-0 Gasket O-ring 1 E27 ** 5 675-0014-0 Gasket O-ring 1 E28 ** 350-10014-0 Gasket O-ring 1 E29 ** 330-71019-0 Hing, Seal 1 E20 ** 333-71630-0 Hing, Seal 1 E20 ** 333-71630-0 Hing, Seal 1 E21 ** 333-7101-0 Hing, Seal 1 E21 ** 333-7101-0 Hing, Seal 1 E23 ** 322-04324-0 Cotter Pin 1 E33 ** 4 674-00147-0 Gasket O-ring 1 E34 ** 330-71010-0 Auxiliary End Cover 1 E34 ** 330-71010-0 Auxiliary End Cover 1 E34 ** 348-60910-0 Gasket O-ring 1 E36 ** 4 694-00916-0 Gasket O-ring 1 E36 ** 4 694-00916-0 Gasket O-ring 1 E37 ** 488-85504-0 Hex Socket Plug 1		Rotation	Seal Code			
E3		**			Port Block Gasket Housing	
E3			1			
E5			1			
E5	<u>E4</u>				Hex Socket Plug	2
Section						
E6 **	E5				Gasket O-ring	2
## 1 691-00904-0 ## 4 694-00904-0 ## 5 695-00904-0 ## 1 691-00906-0 ## 1 691-00906-0 ## 1 691-00906-0 ## 5 695-00906-0 ## 5 695-00906-0 ## 5 695-00906-0 ## 5 695-00906-0 ## 8 13-40266-0 ## 8 13-40266-0 ## 9 20 2006-0 ## 1						
## 4 694-00904-0 ## 5 695-00904-0 ## 1 691-00906-0 ## 1 691-00906-0 ## 1 691-00906-0 ## 1 691-00906-0 ## 1 691-00906-0 ## 1 691-00906-0 ## 2 6 695-00906-0 ## 2 6 695-00906-0 ## 3 6 695-00906-0 ## 3 1 695-00906-0 ## 3 1 695-00906-0 ## 2 6 695-00906-0 ## 3 1 695-00906-0 ## 3 1 695-00906-0 ## 3 1 695-00906-0 ## 3 1 695-00906-0 ## 3 1 695-00906-0 ## 3 1 695-00906-0 ## 3 1 695-00906-0 ## 3 1 695-00906-0 ## 3 1 695-00906-0 ## 3 1 695-00906-0 ## 3 1 695-00901-0 ## 3 1 691-00901-0 ## 3 1 691-00901-0 ## 3 1 691-00901-0 ## 3 1 691-00901-0 ## 3 1 691-00901-0 ## 3 1 691-00901-0 ## 3 1 691-00901-0 ## 3 1 691-00901-0 ## 3 1 691-00901-0 ## 3 1 691-00901-0 ## 3 1 691-00901-0 ## 4 674-00101-0 ## 4 674-00101-0 ## 5 13-43563-0 ## 5 13-43563-0 ## 5 13-45763-0 ## 5 13-45763-0 ## 5 13-45763-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 5 675-00114-0 ## 6 674-00114-	<u>E6</u>		1		Plug	4
E8 **			·			
E8 **	E7				Gasket O-ring	4
E9 ** 1 691-00906-0 Gasket O-ring 6 E10 ** 4 674-00906-0 Gasket O-ring 6 E11 ** ** 5 695-00906-0 Check Valve Assembly 2 E11 ** ** ** 033-70908-0 Screw 2 E12 ** ** 348-1016-0 Washer, Lock 2 E13 ** ** 033-70948-0 Check, P11/14P 2 E14 ** ** 033-70489-0 Clamp 2 E15 ** ** 1 691-00910-0 Gasket O-ring 1 E16 ** 4 674-00910-0 Gasket O-ring 1 E17 ** ** 350-1019-0 Washer, Lock 1 E18 ** ** 306-40172-0 Hex Hot Cape 4 E19 ** ** 033-71619-0 Side Plate 1 E20 ** ** 133-43763-0 Side Plate 1 E20 ** ** 103-71620-0 Dowel Pin 1 E21 ** ** 033-71620-0 Dowel Pin 1 E22 ** ** 013-43963-0 Center Port Plate Assembly 1 E24 ** ** 033-71620-0 Gasket O-ring 1 E25 ** 4 674-00140-0 Gasket O-ring 1 E26 ** 4 674-00140-0 Gasket O-ring 1 E27 ** ** 033-71620-0 Hex Hot Cape Port Plate Assembly 1 E28 ** ** 1 671-00129-0 Gasket O-ring 1 E29 ** ** 1 671-00129-0 Gasket O-ring 1 E27 ** ** 033-73-73-0 Gasket O-ring 1 E28 ** 4 674-00140-0 Gasket O-ring 1 E29 ** ** 1 671-00129-0 Gasket O-ring 1 E29 ** ** 033-72101-0 Gasket O-ring 1 E29 ** ** 033-72101-0 Fressure Plate 1 E29 ** ** 033-72101-0 Fressure Plate 1 E30 ** ** 033-7226-0 Holddown Nut 1 E33 ** ** 033-7226-0 Holddown Nut 1 E33 ** ** 033-7220-0 Gasket O-ring 1 E34 ** ** 033-72101-0 Gasket O-ring 1 E35 ** ** 033-72100-0 Auxiliary End Cover 1 E36 ** 4 674-00147-0 Gasket O-ring 1 E37 ** ** 033-72100-0 Auxiliary End Cover 1 E36 ** 4 674-00147-0 Gasket O-ring 1 E36 ** 4 694-00316-0 Gasket O-ring 1 E37 ** ** 033-7208-0 Fing, Retaining 1 E38 ** ** 033-7208-0 Fing, Retaining 1 E39 ** ** 033-7208-0 Fing, Retaining 1 E30 ** ** 033-7208-0 Fing, Retaining 1 E31 ** ** 033-7208-0 Fing, Retaining 1 E33 ** ** 033-7208-0 Fing, Retaining 1 E36 ** 040-00316-0 Fing, Retaining 1 E37 ** ** 048-00316-0 Fing, Retaining 1 E38 ** ** 048-00316-0 Fing, Retaining 1 E37 ** ** 048-00316-0						
## 4 674-00906-0 ## 5 695-00906-0 ## 5 695-00906-0 ## 5 695-00906-0 ## 605-00906-0 ## 605-00906-0 ## 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 7 605-00906-0 ## 8 605-00906-0 ## 9 605-00906-0	<u>E8</u>				Plug	4
## 5 695-00906-0 ## 5 695-00906-0 ## 5 695-00906-0 ## 5 695-00906-0 ## 5 695-00906-0 ## 5 695-00906-0 ## 5 695-00906-0 ## 5 695-00906-0 ## 6 695-00906-0 ## 6 695-00906-0 ## 6 695-00906-0 ## 6 695-00910-0 ## 6 695-00910-0 ## 6 695-00910-0 ## 6 695-00910-0 ## 6 695-00910-0 ## 6 695-00910-0 ## 6 695-00910-0 ## 6 695-00910-0 ## 6 695-00910-0 ## 7 695-00910-0 ## 7 695-00910-0 ## 7 7 695-00910-0 ## 7 7 695-00910-0 ## 7 8 7 7 695-00910-0 ## 7 8 7 8 7 8 8 8 8 8 8 8 8 8 8 8 8 8 8						
E10 ** ** ** \$13-40266-0 Check Valve Assembly 2 E11 ** ** ** 033-70908-0 Screw 2 E11 ** ** ** 348-10016-0 Washer, Lock 2 E13 ** ** ** 348-10016-0 Washer, Lock 2 E13 ** ** ** 348-10016-0 Garpe 2 E14 ** ** ** 033-70502-0 Ring Check, P11/14P 2 E15 ** ** 488-35055-0 Hex Socket Pluq 1 E16 ** 1 691-00910-0 Gasket O-ring 1 E17 ** *	E9		4		Gasket O-ring	6
E10		**	5	695-00906-0	1	
E11	E10	**	**	S13-40266-0	Check Valve Assembly	2
## 1 671-00129-0 ## 1 671-00129-0 ## 230-776502-0 ## 1 671-00144-0 ## 230-776502-0 ## 1 671-00144-0 ## 230-776502-0 ## 1 671-00144-0 ## 230-776502-0 ## 230-776502-0 ## 230-776502-0 ## 230-776502-0 ## 250-0916-0 ## 250-		**	**			
E13 ** ** ** 033-70502-0 Ring Check, P11/14P 2 E14 **	E12	**	**			
E14 ** ** ** 488-35055-0 Hex Socket Plug 1 E15 ** ** 488-35055-0 Hex Socket Plug 1 ** 1 691-00910-0 E16 ** 4 674-00910-0 E17 ** 5 695-00910-0 E17 ** ** 350-10109-0 Hex Hd Cap Screw 4 E18 ** ** 306-40172-0 Hex Hd Cap Screw 4 E19 ** ** ** 033-71619-0 Side Plate 1 E20 ** ** ** 033-71619-0 Side Plate 1 E20 ** ** ** 033-71620-0 Dowel Pin 1 E22 ** ** ** 013-43363-0 Center Port Plate Assembly 1 E24 ** ** \$13-46762-0 Side Plate and Bearing Assembly 1 E24 ** ** \$13-46762-0 Side Plate and Bearing Assembly 1 E25 ** 4 674-00129-0 Gasket O-ring 1 E26 ** 4 674-00129-0 Gasket O-ring 1 E27 ** ** ** 033-75031-0 Pressure Plate 1 E28 ** ** ** 350-10081-0 Thrust Washer 2 E29 ** ** ** 330-82164-0 Thrust Bearing 1 E30 ** ** ** 333-72026-0 Holddown Nut 1 E31 ** ** ** 033-72026-0 Holddown Nut 1 E33 ** 4 674-00147-0 Gasket O-ring 1 E34 ** ** ** 033-72100-0 Auxiliary End Cover 1 E35 ** 4 674-00147-0 Gasket O-ring 1 E36 ** 4 674-00147-0 Gasket O-ring 1 E37 ** ** ** 336-65082-0 Ring, Retaining 1 E36 ** 4 694-00916-0 Gasket O-ring 1 E37 ** ** 488-35024-0 Hex Socket Plug 1		**	**			
E15		**	**			
## 1 691-00910-0 Gasket O-ring		**	**			
E16		**	1 1		Tiox Cocket Tag	
Second	F16	**	$\overline{}$		Gasket O-ring	1
E17 **		**			_ dasket 0-filing	
E18	E17	**			Washor	1
E19		**	**			
E20		**	**			
E20						
E21	E20	**	**	S13-43334-0		2
E22	E01	**	**	022 71620 0	Dowel Din	- 1
E24 CW ** \$13-46762-0 Side Plate and Bearing Assembly 1 E25 ** 1 671-00129-0 Gasket O-ring 1 ** 4 674-00129-0 Gasket O-ring 1 E26 ** 4 674-00144-0 Gasket O-ring 1 E26 ** 4 674-00144-0 Gasket O-ring 1 E27 ** 4 674-00144-0 Gasket O-ring 1 E27 ** 4 674-00144-0 Gasket O-ring 1 E27 ** ** 033-70531-0 Pressure Plate 1 E28 ** ** 350-10081-0 Thrust Washer 2 E29 ** ** 230-82164-0 Thrust Bearing 1 E30 ** ** 033-72101-0 Ring, Seal 1 E31 ** ** 322-04324-0 Cotter Pin 1 E32 ** ** 356-65081-0 Gasket O-ring 1		**	**		Contar Port Plata Assembly	
Side Plate and Bearing Assembly 1	<u> </u>	CW	**		Center Fort Flate Assembly	
The state of the	E24		1		Side Plate and Bearing Assembly	1
E25					,	
## 5 675-00129-0 ## 1 671-00144-0 E26	F05				0 1 4 0	
** 1 671-00144-0 Gasket O-ring 1	E25				Gasket O-ring	ı
E26						
The state of the	F00				d	
E27 ** ** 033-70531-0 Pressure Plate 1 E28 ** ** 350-10081-0 Thrust Washer 2 E29 ** ** 230-82164-0 Thrust Bearing 1 E30 ** ** 033-72101-0 Ring, Seal 1 E31 ** ** 033-72026-0 Holddown Nut 1 E32 ** ** 322-04324-0 Cotter Pin 1 E33 ** 4 674-00147-0 Gasket O-ring 1 E34 ** ** 033-72100-0 Auxiliary End Cover 1 E35 ** ** 356-65082-0 Ring, Retaining 1 E36 ** 4 694-00916-0 Gasket O-ring 1 E37 ** ** 488-35024-0 Hex Socket Plug 1	E26				Gasket O-ring	1
E28						
E29 ** ** 230-82164-0 Thrust Bearing 1 E30 ** ** 033-72101-0 Ring, Seal 1 E31 ** ** 033-72026-0 Holddown Nut 1 E32 ** ** 322-04324-0 Cotter Pin 1 ** 1 671-00147-0 Gasket O-ring 1 E33 ** 4 674-00147-0 Gasket O-ring 1 E34 ** ** 033-72100-0 Auxiliary End Cover 1 E35 ** ** 356-65082-0 Ring, Retaining 1 E36 ** 4 694-00916-0 Gasket O-ring 1 E37 ** 4 694-00916-0 Hex Socket Plug 1			1			1
E30			1		I hrust Washer	
E31			1			
E32 ** ** 322-04324-0 Cotter Pin 1 E33 ** 1 671-00147-0 E34 ** 5 675-00147-0 E35 ** ** 356-65082-0 Ring, Retaining 1 E36 ** 4 694-00916-0 E37 ** 4 88-35024-0 Hex Socket Plug 1			1	033-72101-0		
E33		ļ	1			
E33	E32	ļ			Cotter Pin	1
** 5 675-00147-0 E34 ** ** 033-72100-0 Auxiliary End Cover 1 E35 ** ** 356-65082-0 Ring, Retaining 1 ** 1 691-00916-0 E36 ** 4 694-00916-0 ** 5 695-00916-0 E37 ** ** 488-35024-0 Hex Socket Plug 1						
E34 ** ** 033-72100-0 Auxiliary End Cover 1 E35 ** ** 356-65082-0 Ring, Retaining 1 E36 ** 4 694-00916-0 ** 5 695-00916-0 E37 ** ** 488-35024-0 Hex Socket Plug 1	E33				Gasket O-ring	1
E35 ** ** 356-65082-0 Ring, Retaining 1 E36 ** 4 694-00916-0 ** 5 695-00916-0 E37 ** ** 488-35024-0 Hex Socket Plug 1						
** 1 691-00916-0 E36 ** 4 694-00916-0 ** 5 695-00916-0 E37 ** * 488-35024-0 Hex Socket Plug 1						
E36	E35		**		Ring, Retaining	1
** 5 695-00916-0 E37 ** 488-35024-0 Hex Socket Plug 1			1	691-00916-0		
** 5 695-00916-0 E37 ** 488-35024-0 Hex Socket Plug 1	E36	**	4	694-00916-0	Gasket O-ring	1
E37 ** 488-35024-0 Hex Socket Plug 1		**]	
	E37	**			Hex Socket Plug	1
		**	**			



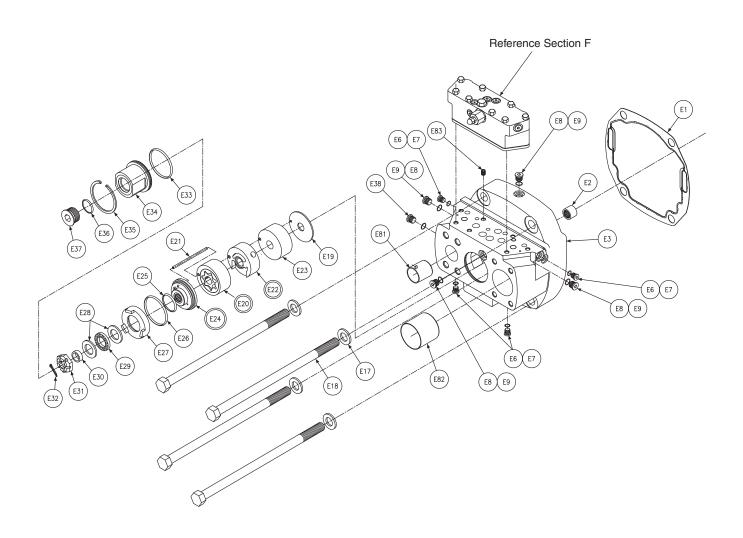


Gerotor Assembly							
Composed of Items: E2, E19, E20, E21, E22, E24,							
E25, E26, E27,	E28, E29, E3	30, E32, ar	nd E33				
No Kit available for R/L versions							
Displacement	Pump Type	Rotation	Part Number				
P11/14		CW	S23-17047-0				
P11/14	V	CCW	S23-17048-0				



			Section		
Balloon #	Rotation	Seal Code	P11/14 V Po Item #	Description	Qty
E1	**	**	033-91079-0	Port Block Gasket Housing	 1
E2	**	**	230-82146-0	Needle Bearing	1
E3	**	**	033-91194-0	Port block	1
E6	**	**	488-35001-0	Plug	4
LO	**	1	691-00904-0	Flug	- +
E7	**	4	694-00904-0	Gasket O-ring	4
-′ }	**	5	695-00904-0	_ dasket 0-mig	7
E8	**	**	488-35041-0	Plug	4
	**	1	691-00906-0	i iug	
E9	**	4	674-00906-0	Gasket O-ring	5
	**	5	695-00906-0	J Gasket O-fing	3
E17	**	**	350-10109-0	Washer	4
E18	**	**	306-40172-0	Hex Hd Cap Screw	4
E19	**	**	033-71619-0	Side Plate	1
E20	**	**	S13-43334-0	Eccentric Ring and Gerotor Assembly	1
E21	**	**	033-71620-0	Dowel Pin	1
E22	**	**	S13-43963-0	Center Port Plate Assembly	1
E23	**	**	033-72620-0	Gerotor Plug	1
	CW	**	S13-46762-0	İ	
E24	CCW	**	S13-46763-0	Side Plate and Bearing Assembly	1
	**	1	671-00129-0		
E25	**	4	674-00129-0	Gasket O-ring	1
	**	5	675-00129-0		•
	**	1	671-00144-0		
E26	**	4	674-00144-0	Gasket O-ring	1
	**	5	675-00144-0	1	-
E27	**	**	033-70531-0	Pressure Plate	1
E28	**	**	350-10081-0	Thrust Washer	2
E29	**	**	230-82164-0	Thrust Bearing	1
E30	**	**	033-72101-0	Ring, Seal	1
E31	**	**	033-72026-0	Holddown Nut	1
E32	**	**	322-04324-0	Cotter Pin	1
	**	1	671-00147-0		<u> </u>
E33	**	4	674-00147-0	Gasket O-ring	1
	**	5	675-00147-0	1	-
E34	**	**	033-72100-0	Auxiliary End Cover	1
E35	**	**	356-65082-0	Ring, Retaining	1
-	**	1	691-00916-0	J	
E36	**	4	694-00916-0	Gasket O-ring	1
	**	5	695-00916-0	1	
E37	**	**	488-35024-0	Plug	1
E38	**	**	488-35003-0	Plug	1
E81	**	**	033-57893-0	Solid Check, P11/14V 1.5 inch	1
E82	**	**	033-57324-0	Solid Check, P11/14V 2.5 inch	1
E83	**	**	353-25037-0	Hex Socket Screw	1



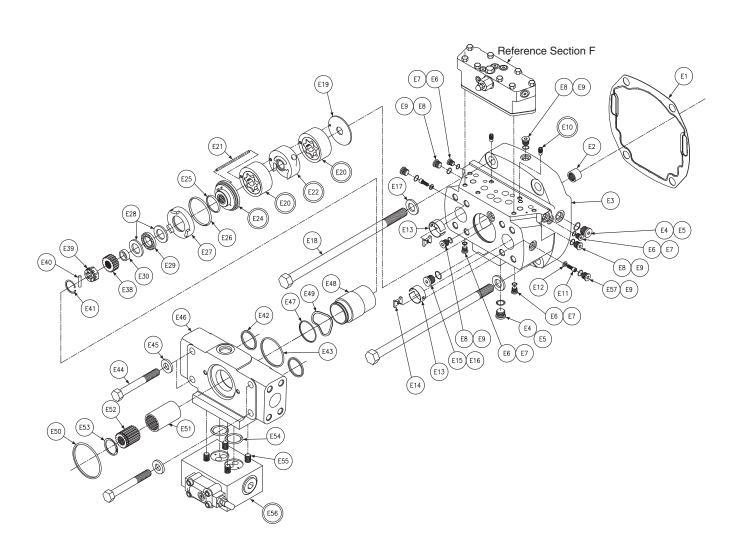

Gerotor Assembly								
Composed of Items: E2, E19, E20, E21, E22, E24, E25, E26, E27, E28, E29, E30, E32, and E33								
			1d E33					
No Kit availabl	e for R/L ver	sions						
Displace-	Model							
ment	Type	Rotation	Part Number					
P11/14	S/X	CW	S23-17043-0					
P11/14	S/X	CCW	S23-17044-0					



					Section E	·	
	r_				14 S&X Port blo	ock	
	Pump		Seal	Thru Drive			
Balloon #	Type	Rotation	Code	Code	Item #	Description	Qty
E1	**	**	**	**	033-91079-0	Port Block Gasket Housing	1
E2	**	**	**	**	230-82146-0	Needle Bearing	1
E3	**	**	**	**	033-57912-0	Port Block	1
E4	**	**	**	**	488-35018-0	Hex Socket plug	2
	**	**	1	**	691-00908-0		
E5	**	**	4	**	694-00908-0	Gasket O-ring	2
	**	**	5	**	695-00908-0	dasker o mig	_
E6	**	**	**	**	488-35001-0	Plug	4
LO	**	**	1	**	691-00904-0	Flug	
F-7	**	**		**		Cooket O vine	4
E7	**	**	4	**	694-00904-0	Gasket O-ring	4
			5	l	695-00904-0	=:	
E8	**	**	**	**	488-35041-0	Plug	4
	**	**	1	**	691-00906-0		
E9	**	**	4	**	674-00906-0	Gasket O-ring	6
	**	**	5	**	695-00906-0		
E10	**	**	**	**	S13-40266-0	Check Valve Assembly	2
E11	**	**	**	**	033-70908-0	Screw	2
E12	**	**	**	**	348-10016-0	Washer, Lock	2
E13	**	**	**	**	033-70502-0	Ring Check	2
E14	**	**	**	**	033-70302-0	Clamp	2
	**	**	**	**			
E15	**	**		**	488-35055-0	Hex Socket Plug	1
			1		691-00910-0		_
E16	**	**	4	**	674-00910-0	Gasket O-ring	1
	**	**	5	**	695-00910-0		
E17	**	**	**	**	350-10109-0	Washer	4
E18	**	**	**	**	306-40172-0	Hex Hd Cap Screw	4
E19	**	**	**	**	033-71619-0	Side Plate	1
	**	**	**	**		Eccentric Ring and	
E20	**	**	**	**	S13-43334-0	Gerotor Assembly	2
E21	**	**	**	**	033-71620-0	Dowel Pin	1
E22	**	**	**	**	013-43963-0	Center Port Plate Assembly	- i -
<u> </u>	**	CW	**	**	S13-46762-0	Center Fort Flate Assembly	
E24	**		**	**		Side Plate and Bearing Assembly	1
	**	CCW **		**	S13-46763-0	0 1	
		**	1		671-00129-0		_
E25	**		4	**	674-00129-0	Gasket O-ring	1
	**	**	5	**	675-00129-0		
	**	**	1	**	671-00144-0		
E26	**	**	4	**	674-00144-0	Gasket O-ring	1
	**	**	5	**	675-00144-0]	
E27	**	**	**	**	033-70531-0	Pressure Plate	1
E28	**	**	**	**	350-10081-0	Thrust Washer	2
E29	**	**	**	**	230-82164-0	Thrust Bearing	1
E30	**	**	**	**	033-72101-0		1
	**	**	**	**		Ring, Seal	
E38	**	**	**	**	033-91051-0	Insert - Spline	
E39				l	033-91052-0	Holddown Nut	
E40	**	**	**	**	033-53921-0	Holddown Pin	
E41	**	**	**	**	033-53923-0	Holddown Pin Retainer	1
	**	**	1	**	691-10131-0		
E42	**	**	4	**	694-10131-0	Gasket O-ring	2
	**	**	5	**	695-10131-0	i	
				Sect	on E CONTINU	ED '	
	Pump		Seal	Thru Drive			
Balloon #				Code	Item #	Description	Qty
	1300	ı. ıotatioii		, o ode	itOili π	Becomption	G Ly

Section E table CONTINUED on next page.




Section View - E - Pump Type - S & X - Port Block Assembly

	**	**	1	**	671-00147-0		
E43	**	**	4	**	674-00147-0	Gasket O-ring	1
	**	**	5	**	675-00147-0	Guoriot o Ting	•
E44	**	**	**	**	306-40088-0	Hex Hd Cap Screw	4
E45	**	**	**	**	350-10136-0	Washer	4
	S	**	**	Α	033-91015-0	SAE A Adaptor for P11/14 S	
E40	Х	**	**	Α	033-57958-0	SAE A Adaptor for P11/14 X	
E46	S	**	**	В	033-57967-0	SAE B Adaptor for P11/14 S	1
	X	**	**	В	033-57957-0	SAE B Adaptor for P11/14 X	
	**	**	1	**	671-00033-0	-	
E47	**	**	4	**	674-00033-0	Gasket O-ring	1
	**	**	5	**	675-00033-0		
E48	**	**	**	**	033-57966-0	Replenish Isolation Tube	1
E49	**	**	**	**	225-92093-0	Wave Spring	1
	** **	**	1	Α	671-00152-0		
		**	4	Α	674-00152-0		
E50	**	**	5	Α	675-00152-0	Cooket O ring	1
⊑ 50	**	**	1	В	671-00155-0	Gasket O-ring	
	**	**	4	В	674-00155-0		
	**	**	5	В	675-00155-0		
E51	**	**	**	**	033-57963-0	Coupling	1
E52	**	**	**	Α	033-57965-0	Insert	1
E32	**	**	**	В	033-57964-0	msert	'
E53	**	**	**	**	356-65128-0	Retaining Ring	1
	**	**	1	**	691-10221-0		
E54	**	**	4	**	694-10221-0	Gasket O-ring	2
** **		5	**	695-10221-0	_		
E55	**	**	**	**	306-40224-0	Hex Hd Cap Screw	4
E56	**	**	1	**	080030100001	Ext Pilot Drain Shuttle Ass'y	1
	**	**	5	**	080030100002	Ext Pilot Drain Shuttle Ass'y	
E57	**	**	**	**	488-35003-0	Hex Hd Plug	2



HY28-2677-03/GC/US Notes	GOLD CUP® P11/P14 Spare Parts Manual



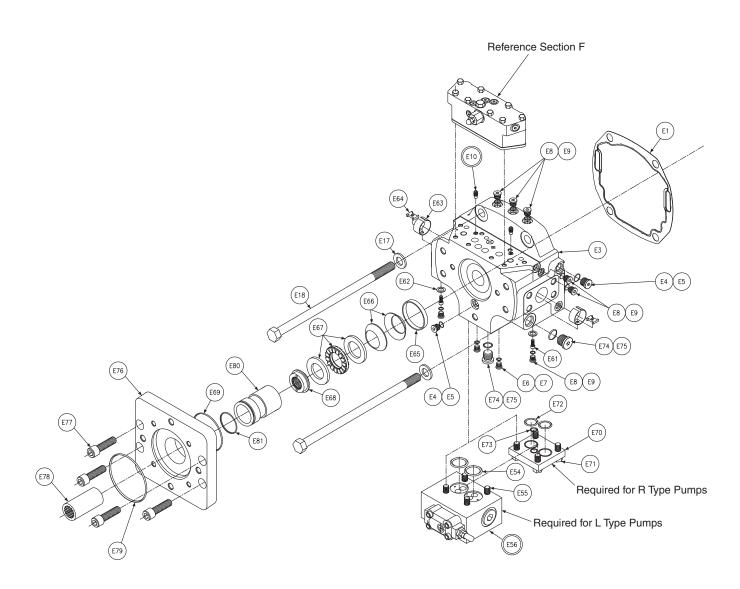




Section E P11/14 R & L Port block				
Balloon	Seal	11/1411 & E 1 0	I C DIOCK	-
#	Code	Item #	Description	Qty
E1	**	033-91079-0	Port Block Gas- ket Housing	1
E3	**	033-92426-0	Port Block	1
<u>=0</u>	**	488-35018-0	Hex Socket Plug	3
<u> </u>	1	691-00908-0	Tiex Socket Flug	-
F.F.			Cooket O sinos	ا م ا
E5	4	694-00908-0	Gasket O-ring	3
	5 **	695-00908-0	D:	
E6		488-35001-0	Plug	2
	1	691-00904-0		_
E7	4	694-00904-0	Gasket O-ring	2
	5	695-00904-0		
E8	**	488-35041-0	Plug	11
	1	691-00906-0	-	
E9	4	674-00906-0	Gasket O-ring	11
	5	695-00906-0	Gaerier e ring	l I
		ĺ	Check Valve	-
E10	**	S13-40266-0	Assembly	2
E17	**	250 10100 0		4
E17		350-10109-0	Washer	4
E18	**	306-40172-0	Hex Hd Cap Screw	4
	1	691-10221-0		
E54	4	694-10221-0	Gasket O-ring	2
	5	695-10221-0	· ·	
E55	**	306-40224-0	Hex Hd Cap Screw	4
E56	1 (080030100001	Ext Pilot Drain	
			Shuttle Ass'y Ext Pilot Drain	1
	5	080030100002	Shuttle Ass'y	
E61	**	359-11100-0	Screw	2
E62	**	033-57450-0		2 2 2 2
E63	**		Washer, Lock	5
	**	033-95533-0	Ring Check	-
<u>E64</u>	**	033-95534-0	Clamp	4
E65		033-92688-0	Locating Race	1
E66	**	033-92689-0	Disc Spring	2
<u>E67</u>	**	230-82222-0	Thrust Bearing	1
E68	**	033-92690-0	Hold Down Nut	1
	1	671-00155-0		
E69	4	674-00155-0	Gasket O-ring	1
	5	675-00155-0	· ·	
E70	**	033-57642-0	Cover Plate	1
	**		Hex Hd Cap	
E71	^*	306-40080-0	Screw	4
	1	691-00024-0	JOI 0 VV	$\vdash \vdash$
E72	4	N/A	Gasket O-ring	2
"1"	5	695-00024-0	Jasket U-IIIIg	-
	1	691-00015-0		$\vdash\vdash\vdash$
EZO		N/A	Gookat O rina	1
E73	4		Gasket O-ring	'
F74	5 **	695-00015-0	Di	
E74		488-35018-0	Plug	3
E75	1	691-00912-0	0	ا ہا
	4	694-00912-0	Gasket O-ring	3
	5	695-00912-0		Ш
E80	**	033-92691-0	Replenish Isolation Tube	3
	1	671-00147-0	1301atiOII IUDE	$\vdash\vdash\vdash$
E81	4	674-00147-0	Gasket O-ring	1
LOI	5	675-00147-0	Jasket U-IIIIg	'
	<u> </u>	015-00141-0		ш

		SAE A Ada	ptor	,	
	Seal	O/ LE / L/ Luc	l co.		
Balloon	Code	Part Number	Qty	Description	
E76	**	033-92684-0	1	SAE "A" Adaptor	
	**			Hex Hd Cap	
E77	_ ^^	358-20200-0	2	Screw	
E78	**	033-92693-0	1	SAE "A" Cou-	
E/0				pling	
	1	671-00152-0			
E79	4	674-00152-0	1	Gasket O-ring	
	5	675-00152-0			
		SAE B Ada	ptor		
D. II.	Seal	D. 1 M	۱	B	
Balloon	Code **	Part Number	Qty	Description	
E76	**	033-92981-0	1	SAE "B" Adaptor	
E77	**	358-24220-0	4	Hex Hd Cap Screw	
E78	**	033-92982-0	1	SAE "B" Cou-	
			<u> </u>	pling	
	1	671-00155-0			
E79	4	674-00155-0	1	Gasket O-ring	
	5	675-00155-0			
	Cool	SAE C Ada	ptor		
Balloon	Seal Code	Part Number	Qty	Description	
E76	**	033-92555-0	1 1		
E/0		033-92333-0	-	SAE "C" Adaptor Hex Hd Cap	
E77	**	358-24220-0	4	Screw	
				SAE "C" Cou-	
E78	**	033-92607-0	1	pling	
	1	671-00159-0		piiig	
E79	4	674-00159-0	1	Gasket O-ring	
	5	675-00159-0	i '	dusiter o mig	
		010 00100 0			
		SAE D Ada	ptor		
	Seal				
Balloon	Code	Part Number	Qty	Description	
E76	**	033-92558-0	1	SAE "D" Adaptor	
E77	**	358-24260-0	4	Hex Hd Cap	
L//		330-24200-0		Screw	
E78	**	033-92482-0	1	SAE "D"/"E"	
			μ.	Coupling	
F76	1	671-00163-0			
E79	4	674-00163-0	1	Gasket O-ring	
	5	675-00163-0			
		CALLA			
	Sac!	SAE E Ada	ptor		
Balloon	Seal Code	Part Number	Qty	Description	
E76	**	033-92467-0	1 1	Description SAE "E" Adaptor	
			-	Hex Hd Cap	
E77	**	358-24260-0	4	Screw	
				SAE "D"/"E"	
E78	**	033-92482-0	1	Coupling	
	1	671-00165-0		Couping	
E79	4	674-00165-0	1	Gasket O-ring	
5	5	675-00165-0		- Gastot o Tillig	
	·	212 00100-0			



Section View - F - Valve Block Assembly

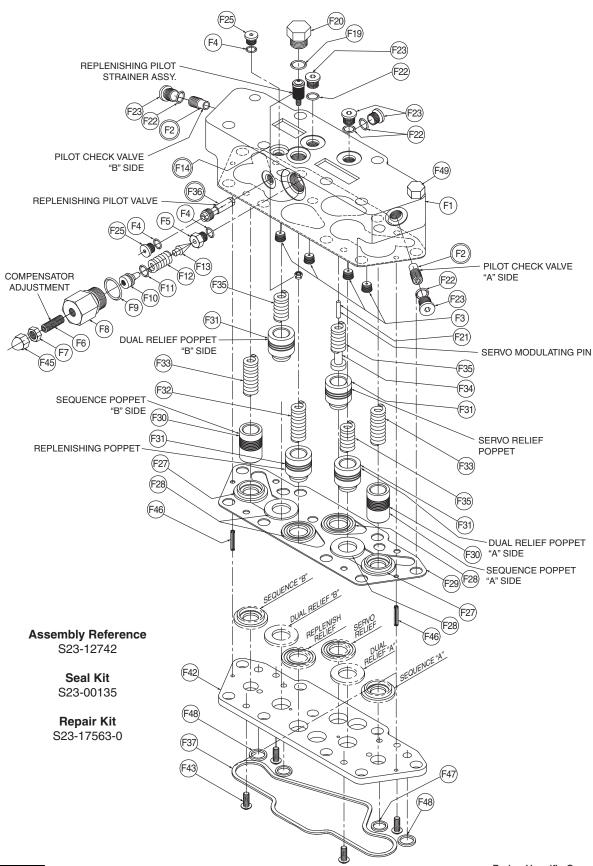



Parker Hannifin Corporation Hydraulic Pump and Power Systems Division Marysville, Ohio USA

Section View - F - Valve Block Assembly

	Valve I	Block Assembly (Refere	ence S23-12742)	
Balloon #	Seal Code	Item #	Description	Qty
F1	**	033-91221-0	Valve Body	1
F2	**	S13-40266-0	Valve Check	2
F3	**	033-91249-0	.046 Dia. Orifice Plug	4
го	1	691-00903-0	.040 Dia. Offlice Flug	- 4
F4	4	694-00903-0	Cooket O ring	3
Г4	5		Gasket O-ring	3
	3 **	695-00903-0	01	- 4
F5	**	033-70508-0	Seat	1
<u>F6</u>	**	312-13160-0	Screw-socket hd	1
F7		335-13100-0	Nut-Jam	1_
F8	**	033-70545-0	Housing Guide	1
	1	691-00910-0		
F9	4	694-00910-0	Gasket O-ring	1
	5	695-00910-0		
F10	**	033-21767-0	Piston	1
	1	671-00012-0		
F11	4	674-00012-0	Gasket O-ring	1
	5	675-00012-0	T i	
F12	**	032-91798-0	Spring	1
F13	**	036-12288-0	Cone	1
F14	**	S13-43240-0	Assy, Repl Strainer	- i
117	1	691-00906-0	Assy, Tieprotrainer	
F19	4	694-00906-0	Gasket O-ring	1
гіэ			- Gasket O-IIIIg	'
E00	5 **	695-00906-0	Divers	
F20	**	488-35003-0	Plug Pin 1/8X5/8 (P units)	<u>1</u> 1
F21		230-82226-0	Pin 1/8X5/8 (P units)	1
	1	691-00904-0	⊣	_
F22	4	694-00904-0	Gasket O-ring	5
	5	695-00904-0		
F23	**	488-35001-0	Plug	5
F25	**	488-35049-0	Plug	2
F27	**	033-70507-0	Seat, Sequence	2
F28	**	033-70500-0	Seat, Repl & Servo	4
F29	**	033-91193-0	Gasket, Valve Block	1
F30	**	033-72378-0	Poppet, Sequence	2
F31	**	033-72379-0	Poppet, Dual & Repl.	4
F32	**	033-22141-0	Spring, Repl.	1
F33	**	033-70512-0	Spring, Sequence	2
F34	**	033-70482-0	Spring, Retainer	
F35	**	033-71086-0	Spring, Netainel Spring, Dual Relief	
F36	**	S23-12814-0	Pilot Valve - Repl Relief	<u>3</u>
1 00	1	671-00050-0	i ilot vaive - Nepi Nellei	
F37			Gasket O ring	4
	5	674-00050-0	Gasket O-ring	1
F40	5 **	675-00050-0	Dista Database	
F42	**	033-91422-0	Plate, Retainer	1
F43		353-25078-0	Screw, Button Head	4
F45	**	327-25006-0	Nut, Acron	1_
F46	**	325-08120-0	Pin, Spring	2
F47	1	671-00013-0		
	4	674-00013-0	Gasket O-ring	2
	5	675-00013-0		
F48	1	671-00014-0		
	4	674-00014-0	Gasket O-ring	2
	5	675-00014-0	<u> </u>	
F49	**	306-40169-0	Screw, HHC 3/8-16 UNC X 3 1/4 Lg. Grade 8	8



HY28-2677-03/GC/US Notes	GOLD CUP® P11/P14 Spare Parts Manual



Offer of Sale

The items described in this document and other documents and descriptions provided by Parker Hannifin Corporation, Hydraulics Group, and its authorized distributors ("Seller") are hereby offered for sale at prices to be established by Seller. This offer and its acceptance by any customer ("Buyer") shall be governed by all of the following Terms and Conditions. Buyer's order for any item described in its document, when communicated to Seller verbally, or in writing, shall constitute acceptance of this offer. All goods or work described will be referred to as "Products".

- Terms and Conditions. Seller's willingness to offer Products, or accept an order for Products, to or from Buyer is expressly conditioned on Buyer's assent to these Terms and Conditions and to the terms and conditions found on-line at www.parker. com/saleterms/. Seller objects to any contrary or additional term or condition of Buyer's order or any other document issued by Buyer.
 Price Adjustments; Payments. Prices stated on the reverse side or preceding
- 2. Price Adjustments; Payments. Prices stated on the reverse side or preceding pages of this document are valid for 30 days. After 30 days, Seller may change prices to reflect any increase in its costs resulting from state, federal or local legislation, price increases from its suppliers, or any change in the rate, charge, or classification of any carrier. The prices stated on the reverse or preceding pages of this document do not include any sales, use, or other taxes unless so stated specifically. Unless otherwise specified by Seller, all prices are F.O.B. Seller's facility, and payment is due 30 days from the date of invoice. After 30 days, Buyer shall pay interest on any unpaid invoices at the rate of 1.5% per month or the maximum allowable rate under applicable law.
- 3. Delivery Dates; Title and Risk; Shipment. All delivery dates are approximate and Seller shall not be responsible for any damages resulting from any delay. Regardless of the manner of shipment, title to any products and risk of loss or damage shall pass to Buyer upon tender to the carrier at Seller's facility (i.e., when it's on the truck, it's yours). Unless otherwise stated, Seller may exercise its judgment in choosing the carrier and means of delivery. No deferment of shipment at Buyers' request beyond the respective dates indicated will be made except on terms that will indemnify, defend and hold Seller harmless against all loss and additional expense. Buyer shall be responsible for any additional shipping charges incurred by Seller due to Buyer's changes in shipping, product specifications or in accordance with Section 13, herein.
- 4. Warranty. Seller warrants that the Products sold hereunder shall be free from defects in material or workmanship for a period of eighteen months from the date of delivery to Buyer. The prices charged for Seller's products are based upon the exclusive limited warranty stated above, and upon the following disclaimer: DISCLAIMER OF WARRANTY: THIS WARRANTY COMPRISES THE SOLE AND ENTIRE WARRANTY PERTAINING TO PRODUCTS PROVIDED HEREUNDER. SELLER DISCLAIMS ALL OTHER WARRANTIES, EXPRESS AND IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.
- 5. Claims; Commencement of Actions. Buyer shall promptly inspect all Products upon delivery. No claims for shortages will be allowed unless reported to the Seller within 10 days of delivery. No other claims against Seller will be allowed unless asserted in writing within 60 days after delivery or, in the case of an alleged breach of warranty, within 30 days after the date within the warranty period on which the defect is or should have been discovered by Buyer. Any action based upon breach of this agreement or upon any other claim arising out of this sale (other than an action by Seller for any amount due to Seller from Buyer) must be commenced within thirteen months from the date of tender of delivery by Seller or, for a cause of action based upon an alleged breach of warranty, within thirteen months from the date within the warranty period on which the defect is or should have been discovered by Buyer.
- 6. LIMITATION OF LIABILITY. UPON NOTÍFICÁTION, SELLER WILL, AT ITS OPTION, REPAIR OR REPLACE A DEFECTIVE PRODUCT, OR REFUND THE PURCHASE PRICE. IN NO EVENT SHALL SELLER BE LIABLE TO BUYER FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF, OR AS THE RESULT OF, THE SALE, DELIVERY, NON-DELIVERY, SERVICING, USE OR LOSS OF USE OF THE PRODUCTS OR ANY PART THEREOF, OR FOR ANY CHARGES OR EXPENSES OF ANY NATURE INCURRED WITHOUT SELLER'S WRITTEN CONSENT, EVEN IF SELLER HAS BEEN NEGLIGENT, WHETHER IN CONTRACT, TORT OR OTHER LEGAL THEORY. IN NO EVENT SHALL SELLER'S LIABILITY UNDER ANY CLAIM MADE BY BUYER EXCEED THE PURCHASE PRICE OF THE PRODUCTS.
- 7. Contingencies. Seller shall not be liable for any default or delay in performance if caused by circumstances beyond the reasonable control of Seller.
- 8. User Responsibility. The user, through its own analysis and testing, is solely responsible for making the final selection of the system and Product and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application and follow applicable industry standards and Product information. If Seller provides Product or system options, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the Products or systems.
- 9. Loss to Buyer's Property. Any designs, tools, patterns, materials, drawings, confidential information or equipment furnished by Buyer or any other items which become Buyer's property, may be considered obsolete and may be destroyed by Seller after two consecutive years have elapsed without Buyer placing an order for the items which are manufactured using such property. Seller shall not be responsible for any loss or damage to such property while it is in Seller's possession or control.
- 10. Special Tooling. A tooling charge may be imposed for any special tooling, including without limitation, dies, fixtures, molds and patterns, acquired to manufacture Products. Such special tooling shall be and remain Seller's property notwithstanding payment of any charges by Buyer. In no event will Buyer acquire any interest in apparatus belonging to Seller which is utilized in the manufacture of the Products, even if such apparatus has been specially converted or adapted for such manufacture and notwithstanding any charges paid by Buyer. Unless otherwise agreed, Seller shall have the right to alter, discard or otherwise dispose of any special tooling or other property in its sole discretion at any time.

- 11. Buyer's Obligation; Rights of Seller. To secure payment of all sums due or otherwise, Seller shall retain a security interest in the goods delivered and this agreement shall be deemed a Security Agreement under the Uniform Commercial Code. Buyer authorizes Seller as its attorney to execute and file on Buyer's behalf all documents Seller deems necessary to perfect its security interest. Seller shall have a security interest in, and lien upon, any property of Buyer in Seller's possession as security for the payment of any amounts owed to Seller by Buyer.
- 12. Improper Use and Indemnity. Buyer shall indemnify, defend, and hold Seller hamless from any claim, liability, damages, lawsuits, and costs (including attorney fees), whether for personal injury, property damage, patent, trademark or copyright infringement or any other claim, brought by or incurred by Buyer, Buyer's employees, or any other person, arising out of: (a) improper selection, improper application or other misuse of Products purchased by Buyer from Seller; (b) any act or omission, negligent or otherwise, of Buyer; (c) Seller's use of patterns, plans, drawings, or specifications furnished by Buyer to manufacture Product; or (d) Buyer's failure to comply with these terms and conditions. Seller shall not indemnify Buyer under any circumstance except as otherwise provided.
- 13. Cancellations and Changes. Orders shall not be subject to cancellation or change by Buyer for any reason, except with Seller's written consent and upon terms that will indemnify, defend and hold Seller harmless against all direct, incidental and consequential loss or damage. Seller may change product features, specifications, designs and availability with notice to Buyer.
- 14. Limitation on Assignment. Buyer may not assign its rights or obligations under this agreement without the prior written consent of Seller.
- 15. Entire Agreement. This agreement contains the entire agreement between the Buyer and Seller and constitutes the final, complete and exclusive expression of the terms of the agreement. All prior or contemporaneous written or oral agreements or negotiations with respect to the subject matter are herein merged.
- 16. Waiver and Severability. Failure to enforce any provision of this agreement will not waive that provision nor will any such failure prejudice Seller's right to enforce that provision in the future. Invalidation of any provision of this agreement by legislation or other rule of law shall not invalidate any other provision herein. The remaining provisions of this agreement will remain in full force and effect.
- 17. Termination. This agreement may be terminated by Seller for any reason and at any time by giving Buyer thirty (30) days written notice of termination. In addition, Seller may by written notice immediately terminate this agreement for the following: (a) Buyer commits a breach of any provision of this agreement (b) the appointment of a trustee, receiver or custodian for all or any part of Buyer's property (c) the filling of a petition for relief in bankruptcy of the other Party on its own behalf, or by a third party (d) an assignment for the benefit of creditors, or (e) the dissolution or liquidation of the Buyer.

 18. Governing Law. This agreement and the sale and delivery of all Products hereunder shall be deemed to have taken place in and shall be governed and construed in accordance with the laws of the State of Ohio, as applicable to contracts executed and wholly performed therein and without regard to conflicts of laws principles. Buyer irrevocably agrees and consents to the exclusive jurisdiction and venue of the courts of Cuyahoga County, Ohio with respect to any dispute, controversy or claim arising out of or relating to this agreement. Disputes between the parties shall not be settled by arbitration unless, after a dispute has arisen, both parties expressly agree in writing to arbitrate the dispute.
- 19. Indemnity for Infringement of Intellectual Property Rights. Seller shall have no liability for infringement of any patents, trademarks, copyrights, trade dress, trade secrets or similar rights except as provided in this Section. Seller will defend and indemnify Buyer against allegations of infringement of U.S. patents, U.S. trademarks, copyrights, trade dress and trade secrets ("Intellectual Property Rights"). Seller will defend at its expense and will pay the cost of any settlement or damages awarded in an action brought against Buyer based on an allegation that a Product sold pursuant to this Agreement infringes the Intellectual Property Rights of a third party. Seller's obligation to defend and indemnify Buyer is contingent on Buyer notifying Seller within ten (10) days after Buyer becomes aware of such allegations of infringement, and Seller having sole control over the defense of any allegations or actions including all negotiations for settlement or compromise. If a Product is subject to a claim that it infringes the Intellectual Property Rights of a third party, Seller may, at its sole expense and option, procure for Buyer the right to continue using the Product, replace or modify the Product so as to make it noninfringing, or offer to accept return of the Product and return the purchase price less a reasonable allowance for depreciation. Notwithstanding the foregoing, Seller shall have no liability for claims of infringement based on information provided by Buyer, or directed to Products delivered hereunder for which the designs are specified in whole or part by Buyer, or infringements resulting from the modification, combination or use in a system of any Product sold hereunder. The foregoing provisions of this Section shall constitute Seller's sole and exclusive liability and Buyer's sole and exclusive remedy for infringement of Intellectual Property Rights
- 20. Taxes. Unless otherwise indicated, all prices and charges are exclusive of excise, sales, use, property, occupational or like taxes which may be imposed by any taxing authority upon the manufacture, sale or delivery of Products.
- 21. Equal Opportunity Clause. For the performance of government contracts and where dollar value of the Products exceed \$10,000, the equal employment opportunity clauses in Executive Order 11246, VEVRAA, and 41 C.F.R. §§ 60-1.4(a), 60-741.5(a), and 60-250.4, are hereby incorporated.



North America

Industrial

USA

Chicago Region Naperville, IL Tel: (630) 964 0796

Great Lakes Region

Fairlawn, OH Tel: (330) 670 2680

Northeast Region Lebanon, NJ Tel: (908) 236 4121

Pacific Region Buena Park, CA Tel: (714) 228 2509

Southern Region Alpharetta, GA Tel: (770) 619 9767

Canada

Milton, Ontario Tel: (905) 693 3000

México

Toluca, Edo. de México Tel: (52) 72 2275 4200

Mobile

USA

Global Mobile Lincolnshire, IL Tel: (847) 821 1500

Central Region Lincolnshire, IL Tel: (847) 821 1500

Eastern Region North Canton, OH Tel: (330) 284 3355

Midwest Region Hiawatha, IA Tel: (319) 393 1221

Southern Region Aledo, TX Tel: (817) 441 1794

Tel: (817) 441 1794 Western Region

Buena Park, CA Tel: (714) 228 2509

Canada Milton, Ontario Tel: (905) 693 3000

Tel: (905) 693 3000 México

Apodaca, N.L. Tel: (52) 81 8156 6000 Truck

USA Eastern Region Cleveland, OH Tel: (440) 519 1125

Western Region San Ramon, CA Tel: (925) 735 9573

Canada Milton, Ontario Tel: (905) 693 3000

México Apodaca, N.L. Tel: (52) 81 8156 6000

Europe

Austria Wiener Neustadt Tel: (43) 2622 23501 0

Belgium Nivelles

Tel: (32) 67 280 900

Czech Republic and Slovakia

Klecany Tel: (420) 284 083 111

Denmark Ballerup

Tel: (45) 4356 0400

Finland Vantaa

Tel: (358) 20 753 2500

France

Contamine-sur-Arve Tel: (33) 4 50 25 80 25

Germany Kaarst

Tel: (49) 2131 4016 0

Greece Athens

Tel: (30) 210 933 6450

Hungary Budapest

Tel: (36) 1 220 4155

Ireland

County Dublin, Baldonnell Tel: (353) 1 466 6370

Italv

Corsico, Milano Tel: (39) 02 45 19 21 The Netherlands

Oldenzaal Tel: (31) 541 585000

Norway Ski

Tel: (47) 64 91 10 00

Poland Warsaw

Tel: (48) 22 57 32400

Portugal

Leca da Palmeira Tel: (351) 22 999 7360

Romania Bucharest

Tel: (40) 21 252 1382

Russia Moscow

Tel: (7) 495 580 9145

Slovenia Novo Mesto

Tel: (386) 7 337 6650

Spain Madrid

Tel: (34) 91 675 7300

Sweden Spanga

Tel: (46) 8 597 95000

Ukraine Kiev

Tel: (380) 44 494 2731 United Kingdom

Warwick,

Tel: (44) 1926 317878

Asia Pacific

Australia Castle Hill Tel: (61) 2 9634 7777

China Beijing

Tel: (86) 10 6561 0520

Shanghai

Tel: (86) 21 5031 2525

Hong Kong

Tel: (852) 2428 8008

India

Mahape, Navi Mumbai Tel: (91) 22 5613 7081 Korea

Seoul Tel: (82) 2 559 0400

Malaysia Subang Jaya

Tel: (60) 3 5638 1476 New Zealand Mt. Wellington

Tel: (64) 9 574 1744 Japan Tokyo

Tel: (81) 3 6408 3900

Singapore Jurong Town Tel: (65) 6 887 6300

Taiwan Taipei

Tel: (886) 2 2298 8987

Thailand Bangkok

Tel: (662) 717 8140

Middle East

United Arab Emirates Abu Dhabi Tel: (971) 2 678 8587

Latin America

Pan American Division Miami, FL Tel: (305) 470 8800

Argentina Buenos Aires Tel: (54) 33 2744 4129

Brazil Cachoeirinha RS Tel: (55) 51 3470 9144

Venezuela Caracas Tel: (58) 212 238 5422

Africa

South Africa Kempton Park Tel: (27) 11 961 0700

© 2013 Parker Hannifin Corporation, all rights reserved



